


The Tap Shop 300004 Basin Waste Installation Instruction




General Instructions:

1. To be installed in accordance with the laws of the local authority.
2. The waste should be installed by a fully qualified individual.
3. Please check the finish for blemishes on receipt. Any defects reported after fitting will be regarded as damage resulting from the installation process, misuse or poor maintenance and will not be claimable under warranty.
4. This waste is a push button waste for a basin with an overflow.

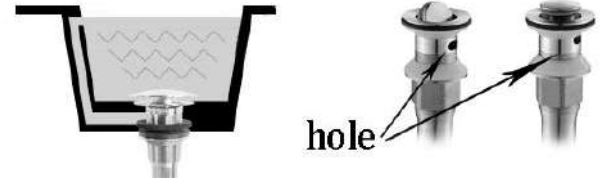

Installation Instructions:

1. Check the basin is clean and that all sealing surfaces are free of debris.
2. Remove the back nut and also the bottom seal from the basin waste.
3. Make sure the top seal is in place on the waste body and then insert the waste body into the basin hole. Make sure the seal is correctly seated between the basin and the waste body.
4. From underneath the basin, place the bottom seal on the waste body. When the seal is in place against the basin, screw the back nut on and tighten. Do not over tighten. Use a pure silicone sealant where necessary.
5. After installation, check all joints for leaks.

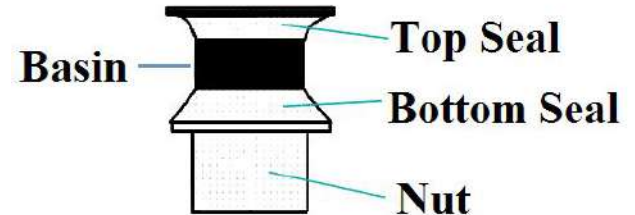

Aftercare:

1. Please use only a soft cloth and warm water with a neutral soap when cleaning the waste to avoid damaging the finish. The finish is durable but can be damaged by certain cleaners.

All images are for illustrative purposes only. Product may vary.